

Load Balancing Evertz Mediator-X

Version 1.3.1



Table of Contents

1. About this Guide	4
2. Loadbalancer.org Appliances Supported	4
3. Software Versions Supported	4
3.1. Loadbalancer.org Appliance	4
3.2. Evertz Mediator	4
4. Evertz Mediator-X	4
5. Load Balancing Evertz Mediator-X	5
5.1. Sizing, Capacity, and Performance for a Virtual Load Balancer Deployment	5
5.2. Persistence (aka Server Affinity)	5
5.3. Virtual Service (VIP) Requirements	5
5.4. Port Requirements	5
5.5. TLS/SSL Termination	6
6. Deployment Concept	6
6.1. Scenario 1 – Simple Deployment	6
6.2. Scenario 2 – Deployment Using TLS-Based Encryption	6
7. Load Balancer Deployment Methods	7
7.1. Layer 4 DR Mode	7
7.2. Layer 7 SNAT Mode	8
7.3. Our Recommendation	9
8. Configuring Evertz Mediator-X for Load Balancing	10
8.1. Additional Changes when Adding TLS-Based Encryption	10
8.1.1. DASH Manifests	10
8.1.2. Mediator-X Portal	11
9. Loadbalancer.org Appliance – the Basics	11
9.1. Virtual Appliance	11
9.2. Initial Network Configuration	12
9.3. Accessing the Appliance WebUI	12
9.3.1. Main Menu Options	13
9.4. Appliance Software Update	14
9.4.1. Online Update	14
9.4.2. Offline Update	14
9.5. Ports Used by the Appliance	15
9.6. HA Clustered Pair Configuration	16
10. Appliance Configuration for Evertz Mediator-X – Using Layer 4 DR Mode (Scenario 1: Simple Deployment)	16
10.1. Configuring the Virtual Service (VIP)	16
10.2. Defining the Real Servers (RIPs)	17
11. Appliance Configuration for Evertz Mediator-X – Using Layer 7 SNAT Mode (Scenario 2: Deployment Using TLS-Based Encryption)	18
11.1. Enabling Multithreaded Load Balancing	18
11.2. Configuring the Virtual Service (VIP)	19
11.3. Defining the Real Servers (RIPs)	20
11.4. Setting Up the TLS/SSL Termination	21
11.4.1. Uploading a Certificate	21
11.4.2. Creating the TLS/SSL Termination	21
11.5. Finalizing the Configuration	22
12. Testing & Verification	22
12.1. Using System Overview	22
13. Technical Support	23

14. Further Documentation 23

15. Appendix 24

 15.1. Configuring HA - Adding a Secondary Appliance 24

 15.1.1. Non-Replicated Settings 24

 15.1.2. Configuring the HA Clustered Pair 25

16. Document Revision History 27

1. About this Guide

This guide details the steps required to configure a load balanced Evertz Mediator-X environment utilizing Loadbalancer.org appliances. It covers the configuration of the load balancers and also any Evertz Mediator-X configuration changes that are required to enable load balancing.

For more information about initial appliance deployment, network configuration and using the Web User Interface (WebUI), please also refer to the [Administration Manual](#).

2. Loadbalancer.org Appliances Supported

All our products can be used for load balancing Evertz Mediator-X. For full specifications of available models please refer to <https://www.loadbalancer.org/products/enterprise>.

Some features may not be available or fully supported in all cloud platforms due to platform specific limitations. For more details, please refer to the "Main Differences to our Standard (Non-Cloud) Product" section in the appropriate cloud platform [Quick Start Guide](#) or check with Loadbalancer.org support.

3. Software Versions Supported

3.1. Loadbalancer.org Appliance

- V8.9.1 and later

Note

The screenshots used throughout this document aim to track the latest Loadbalancer.org software version. If you're using an older version, or the very latest, the screenshots presented here may not match your WebUI exactly.

3.2. Evertz Mediator

- Evertz Mediator-X

4. Evertz Mediator-X

Evertz Mediator-X unifies content acquisition, content processing, media management, production, playout, and delivery into a single, integrated environment. The unification of these services on a single platform delivers optimized media workflows and increased operational efficiency.

Built on over fifteen years of Mediator product development and deployment expertise, Mediator-X has a modern, scalable, infrastructure-agnostic architecture which can be deployed in public cloud, private cloud, or hybrid environments, enabling users to be flexible with their deployment strategies and to grow the platform wherever the business case dictates.

Evertz recommends Loadbalancer.org appliances to provide high availability and load balancing of the Mediator-X platform.



5. Load Balancing Evertz Mediator-X

Note

It's highly recommended that you have a working Evertz Mediator-X environment first before implementing the load balancer.

5.1. Sizing, Capacity, and Performance for a Virtual Load Balancer

Deployment

The Loadbalancer.org appliances can be deployed as **virtual appliances**.

For **small deployments** handling up to 300 concurrent connections/users, your virtual host should be allocated a minimum of 4 vCPUs, 4 GB of RAM, and 8 GB of disk storage.

For **large deployments** handling over 300 concurrent connections/users, your virtual host should be allocated a minimum of 8 vCPUs, 8 GB of RAM, and 8 GB of disk storage.

For **significantly larger deployments**, your Evertz representative will give you custom sizing and resource guidelines based on the expected load on your load balancers and your predicted usage profile.

5.2. Persistence (aka Server Affinity)

For the **layer 4 DR mode scenario**, each virtual service uses source IP address-based persistence.

For the **layer 7 load balancing scenario** (the configuration that adds TLS-based encryption), the persistence mode *X-Forwarded-For and Source IP* is used. This uses X-Forwarded-For HTTP headers as the primary persistence method, with source IP addresses used as a backup persistence method.

5.3. Virtual Service (VIP) Requirements

To provide load balancing and HA for Evertz Mediator-X, the following VIP is required:

- Mediator-X Global Access

The "Global" virtual service handles Mediator-X user interface traffic and API endpoint traffic. "Global" access to both services is provided using a single virtual service on the load balancer.

Additionally, a TLS/SSL termination service is required for the scenario that adds TLS-based encryption.

5.4. Port Requirements

The following table shows the ports that are load balanced:

Port	Protocols	Uses
80	TCP/HTTP	Mediator-X user interface access, Mediator-X API endpoint access
443	TCP/HTTPS	Mediator-X user interface access over TLS (optional)



5.5. TLS/SSL Termination


It is possible to configure a TLS/SSL termination service in front of the plaintext, port 80, HTTP-based **Mediator-Global** service. This enables inbound client connections to be secured using TLS. Connections from the load balancer to the Mediator-X servers remain as plaintext HTTP connections (not encrypted) on port 80. In this way, inbound client connections can be secured using encryption without needing to make any changes to the back end Mediator-X servers.

6. Deployment Concept

Evertz Mediator-X can be load balanced in two different ways:

- **Simple deployment:** Uses a single virtual service to load balance all of the port 80 traffic used by Mediator-X (the user interface traffic as well as the API endpoint traffic)
- **Deployment using TLS-based encryption:** An alternative deployment type that should only be used when there is the requirement to secure client connections using TLS-based encryption. Using this deployment type, clients can connect to the Mediator-X User Interface using HTTPS on port 443

6.1. Scenario 1 – Simple Deployment

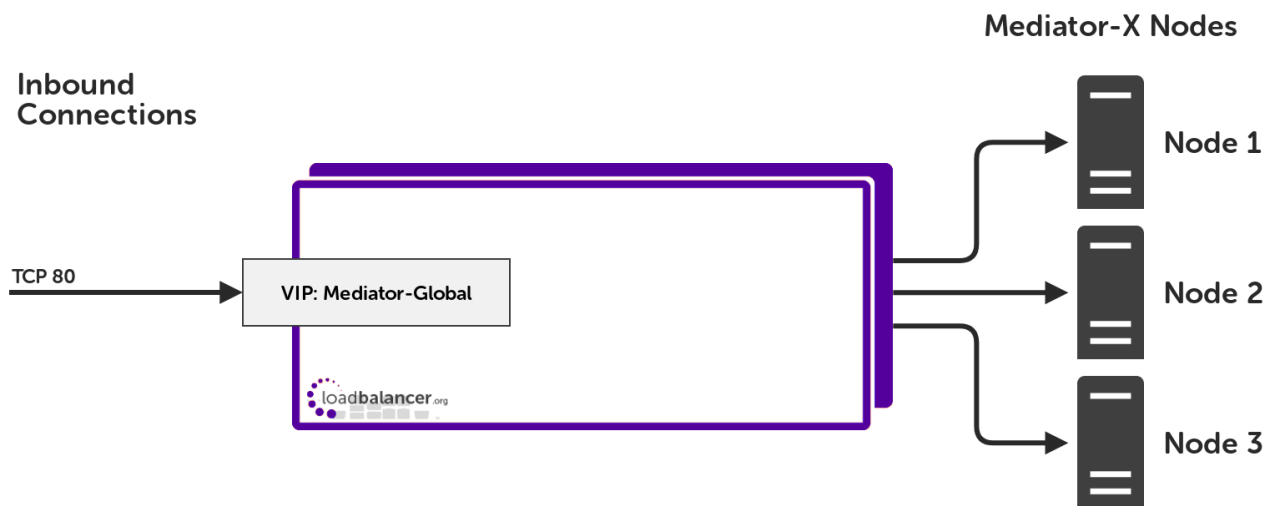

Note


The load balancer can be deployed as a single unit, although Loadbalancer.org recommends a clustered pair for resilience & high availability. Please refer to [Configuring HA - Adding a Secondary Appliance](#) for more details on configuring a clustered pair.

In this deployment, a single virtual service is used. The virtual service uses layer 4 DR mode, offering the greatest possible network speed and scalability.

Layer 4 DR mode is the load balancing method that has traditionally been used with Evertz Mediator deployments.

6.2. Scenario 2 – Deployment Using TLS-Based Encryption



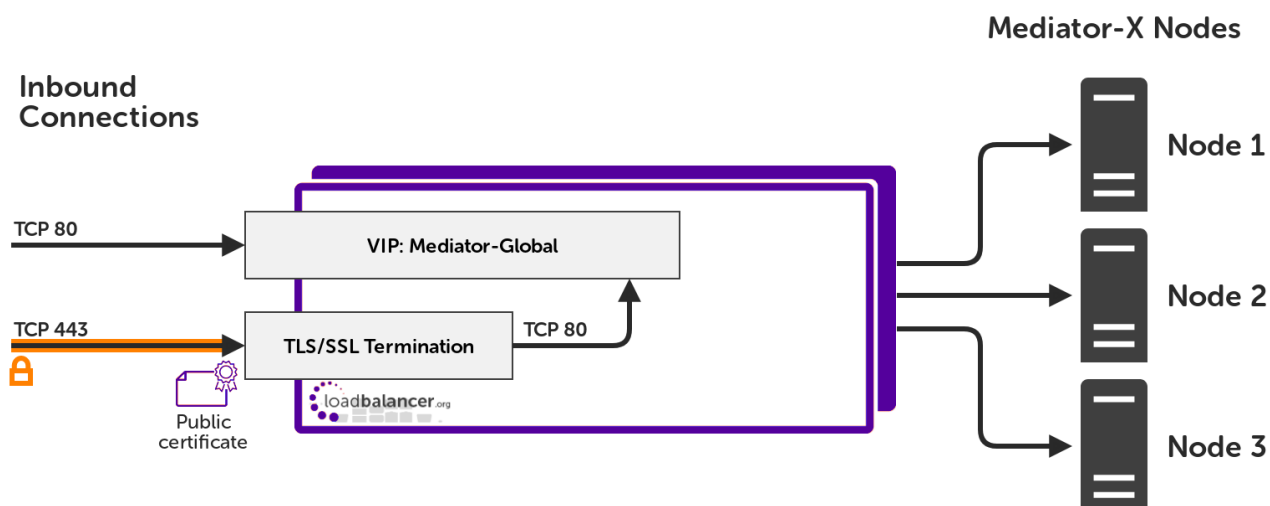

Note

The load balancer can be deployed as a single unit, although Loadbalancer.org recommends a clustered pair for resilience & high availability. Please refer to [Configuring HA - Adding a Secondary Appliance](#) for more details on configuring a clustered pair.

In this deployment, one virtual service is used in addition to a TLS/SSL termination. The virtual service uses layer 7 SNAT mode.

This alternative deployment type allows for Mediator-X traffic to be secured using TLS, with clients sending encrypted traffic on port 443 instead of plaintext traffic on port 80.

7. Load Balancer Deployment Methods

The load balancer can be deployed in 4 fundamental ways: *Layer 4 DR mode*, *Layer 4 NAT mode*, *Layer 4 SNAT mode*, and *Layer 7 SNAT mode*.

For Mediator-X, using layer 4 DR mode is recommended due to its raw throughput and huge scalability. It is also possible to use layer 7 SNAT mode, which allows adding TLS-based encryption for client traffic, however the performance of this set up is not as great as layer 4 DR mode. These load balancing modes are described below and are used for the configurations presented in this guide. For configuring using DR mode please refer to [Appliance Configuration for Evertz Mediator-X – Using Layer 4 DR Mode \(Scenario 1: Simple Deployment\)](#) and for configuring using layer 7 SNAT mode, which allows adding TLS-based encryption, refer to [Appliance Configuration for Evertz Mediator-X – Using Layer 7 SNAT Mode \(Scenario 2: Deployment Using TLS-Based Encryption\)](#).


7.1. Layer 4 DR Mode

Layer 4 DR (Direct Routing) mode is a very high performance solution that requires little change to your existing infrastructure. The image below shows an example network diagram for this mode.

Note

Kemp, Brocade, Barracuda & A10 Networks call this *Direct Server Return* and F5 call it *nPath*.




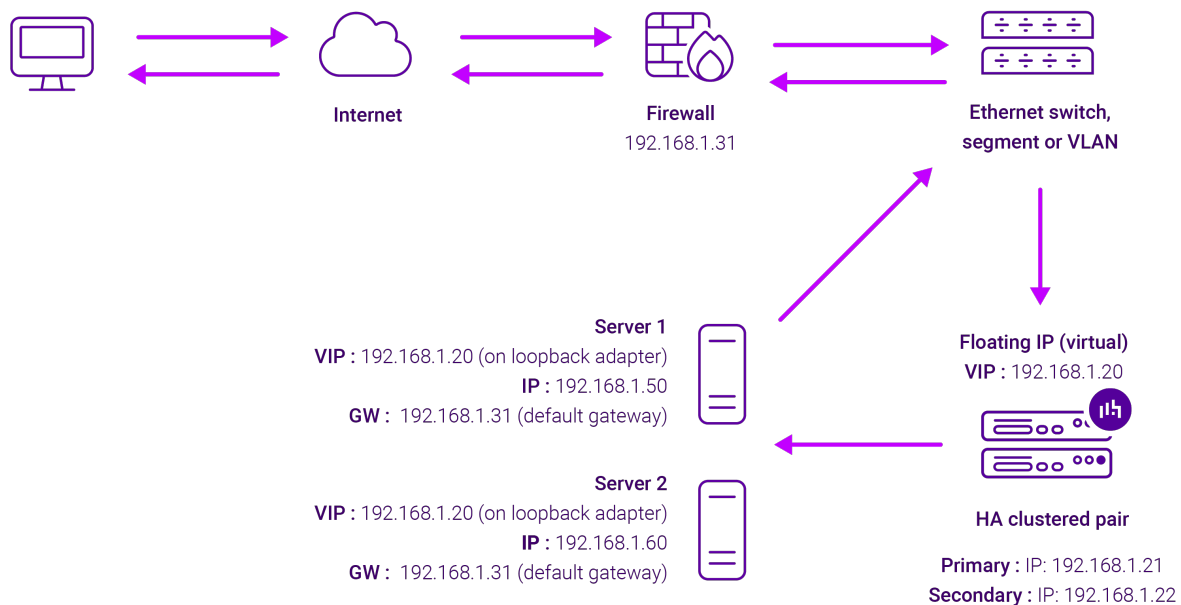

- DR mode works by changing the destination MAC address of the incoming packet to match the selected Real Server on the fly which is very fast.
- When the packet reaches the Real Server it expects the Real Server to own the Virtual Services IP address (VIP). This means that each Real Server (and the load balanced application) must respond to both the Real Server's own IP address and the VIP.
- The Real Server should not respond to ARP requests for the VIP. Only the load balancer should do this. Configuring the Real Server in this way is referred to as "Solving the ARP Problem". For more information please refer to [DR Mode Considerations](#).
- On average, DR mode is 8 times quicker than NAT mode for HTTP and much faster for other applications such as Remote Desktop Services, streaming media and FTP.
- The load balancer must have an interface in the same subnet as the Real Servers to ensure layer 2 connectivity which is required for DR mode to operate.
- The VIP can be brought up on the same subnet as the Real Servers or on a different subnet provided that the load balancer has an interface in that subnet.
- Port translation is not possible with DR mode, e.g. VIP:80 → RIP:8080 is not supported.
- DR mode is transparent, i.e. the Real Server will see the source IP address of the client.

7.2. Layer 7 SNAT Mode

Layer 7 SNAT mode uses a proxy (HAProxy) at the application layer. Inbound requests are terminated on the load balancer and HAProxy generates a new corresponding request to the chosen Real Server. As a result, Layer 7 is typically not as fast as the Layer 4 methods. Layer 7 is typically chosen when either enhanced options such as SSL termination, cookie based persistence, URL rewriting, header insertion/deletion etc. are required, or when the network topology prohibits the use of the layer 4 methods. The image below shows an example network diagram for this mode.

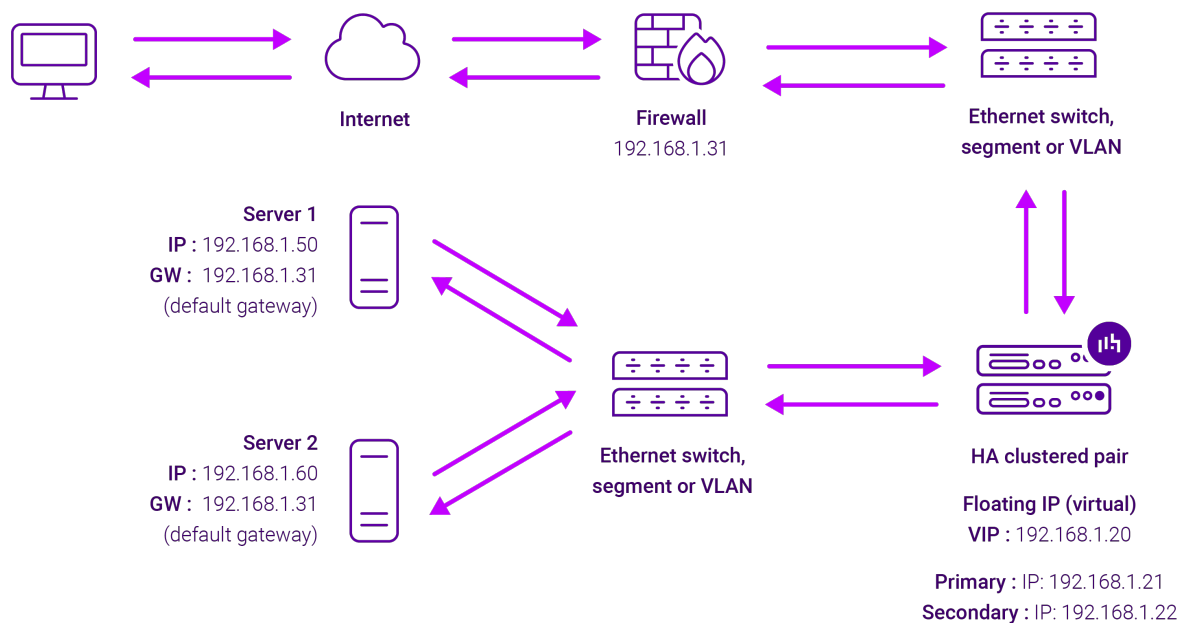

- Because layer 7 SNAT mode is a full proxy, Real Servers in the cluster can be on any accessible network including across the Internet or WAN.
- Layer 7 SNAT mode is not transparent by default, i.e. the Real Servers will not see the source IP address of the client, they will see the load balancer's own IP address by default, or any other local appliance IP address if preferred (e.g. the VIP address). This can be configured per layer 7 VIP. If required, the load balancer can be configured to provide the actual client IP address to the Real Servers in 2 ways. Either by inserting a header that contains the client's source IP address, or by modifying the Source Address field of the IP packets and replacing the IP address of the load balancer with the IP address of the client. For more information on these methods please refer to [Transparency at Layer 7](#).
- Layer 7 SNAT mode can be deployed using either a one-arm or two-arm configuration. For two-arm deployments, **eth1** is typically used for client side connections and **eth0** is used for Real Server connections, although this is not mandatory since any interface can be used for any purpose.
- Requires no mode-specific configuration changes to the load balanced Real Servers.
- Port translation is possible with Layer 7 SNAT mode, e.g. VIP:80 → RIP:8080 is supported.
- You should not use the same RIP:PORT combination for layer 7 SNAT mode VIPs and layer 4 SNAT mode VIPs because the required firewall rules conflict.

7.3. Our Recommendation

Where possible, we recommend that Layer 4 Direct Routing (DR) mode is used. This mode offers the best possible performance since replies go directly from the Real Servers to the client, not via the load balancer. It's also relatively simple to implement. Ultimately, the final choice does depend on your specific requirements and infrastructure.

If DR mode cannot be used, for example if the real servers are located in remote routed networks, then SNAT mode is recommended. SNAT is also recommended if TLS-based encryption is required for the HTTP aspect of the Mediator-X inbound client traffic.

If the load balancer is deployed in AWS or Azure, layer 7 SNAT mode must be used as layer 4 direct routing is not currently possible on these platforms.

8. Configuring Evertz Mediator-X for Load Balancing

Some changes must be made to the Mediator-X real servers in order for them to be correctly load balanced.

These changes need to be configured by an Evertz Deployment Team. Contact your Evertz representative for further information.

1. On the Mediator-X deployment, connect to Node0 and log in as the root user. This can be done by executing the command **sudo su** and then entering the system specific shell access password.
2. Navigate to the directory **/srv/salt/pillar**. This can be done by executing the command **cd /srv/salt/pillar**.
3. Edit the file **system.sls**, for example using a text editor such as nano or vim: **nano system.sls**.
4. Find the **virtual_ips** parameter and add the virtual IP address that will be used for the load balanced deployment. This is the user facing IP address that all clients will connect to when accessing the load balanced Mediator-X services. The result should look like the following:

```
# Set the loadbalancer virtual ip or leave blank
virtual_ips : 10.0.1.50
```

5. Save and exit the system.sls file.
6. Run the salt command and call the **state.highstate** function, which will automatically apply the changed configuration across all Mediator-X nodes. The full command to execute is:

```
sudo salt "*" state.highstate
```

7. Run the salt command and call a function to restart the nginx service across all Mediator-X nodes. The full command to execute is:

```
sudo salt -G 'is_mediatorx:True' service.restart nginx
```

8.1. Additional Changes when Adding TLS-Based Encryption

When deploying using [Scenario 2 – Deployment Using TLS-Based Encryption](#), there may be situations where it is desired (or required) to access certain resources over HTTPS that would otherwise only be served over plaintext HTTP. DASH manifests and the Mediator-X portal are two examples of such resources.

Note

For further Mediator-X-specific information beyond what is presented here, or for advice on whether other parts of the Mediator-X application to be configured to point to and use HTTPS, contact your Evertz representative.

8.1.1. DASH Manifests

To allow HTTPS-based access to take place:



1. In the Mediator-X settings navigate to *Browse media > Browse info*.
2. Ensure that the scheme of the *Browse http url* is **https**.

8.1.2. Mediator-X Portal

To allow HTTPS-based access to take place:

1. In the Mediator-X settings navigate to *Edit system settings*.
2. Ensure that the scheme of the *Base ui url* is **https**.

9. Loadbalancer.org Appliance – the Basics

9.1. Virtual Appliance

A fully featured, fully supported 30 day trial is available if you are conducting a PoC (Proof of Concept) deployment. The VA is currently available for VMware, Virtual Box, Hyper-V, KVM, XEN and Nutanix AHV and has been optimized for each Hypervisor. By default, the VA is allocated 2 vCPUs, 4GB of RAM and has a 20GB virtual disk. The Virtual Appliance can be downloaded [here](#).

Note

The same download is used for the licensed product, the only difference is that a license key file (supplied by our sales team when the product is purchased) must be applied using the appliance's WebUI.



Note

Please refer to [Virtual Appliance Installation](#) and the ReadMe.txt text file included in the VA download for additional information on deploying the VA using the various Hypervisors.

Note

The VA has 4 network adapters. For VMware only the first adapter (**eth0**) is connected by default. For HyperV, KVM, XEN and Nutanix AHV all adapters are disconnected by default. Use the network configuration screen within the Hypervisor to connect the required adapters.

9.2. Initial Network Configuration

After boot up, follow the instructions on the appliance console to configure the management IP address, subnet mask, default gateway, DNS servers and other network and administrative settings.

Important

Be sure to set a secure password for the load balancer, when prompted during the setup routine.

9.3. Accessing the Appliance WebUI

The WebUI is accessed using a web browser. By default, users are authenticated using Apache authentication. Users can also be authenticated against LDAP, LDAPS, Active Directory or Radius - for more information, please refer to [External Authentication](#).

Note

There are certain differences when accessing the WebUI for the cloud appliances. For details, please refer to the relevant [Quick Start / Configuration Guide](#).

1. Using a browser, navigate to the following URL:

`https://<IP-address-configured-during-the-network-setup-wizard>:9443/lbadmin/`

Note

You'll receive a warning about the WebUI's SSL certificate. This is due to the default self signed certificate that is used. If preferred, you can upload your own certificate - for more information, please refer to [Appliance Security Features](#).

Note

If you need to change the port, IP address or protocol that the WebUI listens on, please refer to [Service Socket Addresses](#).

2. Log in to the WebUI using the following credentials:


Username: loadbalancer

Password: <configured-during-network-setup-wizard>

Note

To change the password, use the WebUI menu option: **Maintenance > Passwords**.

Once logged in, the WebUI will be displayed as shown below:

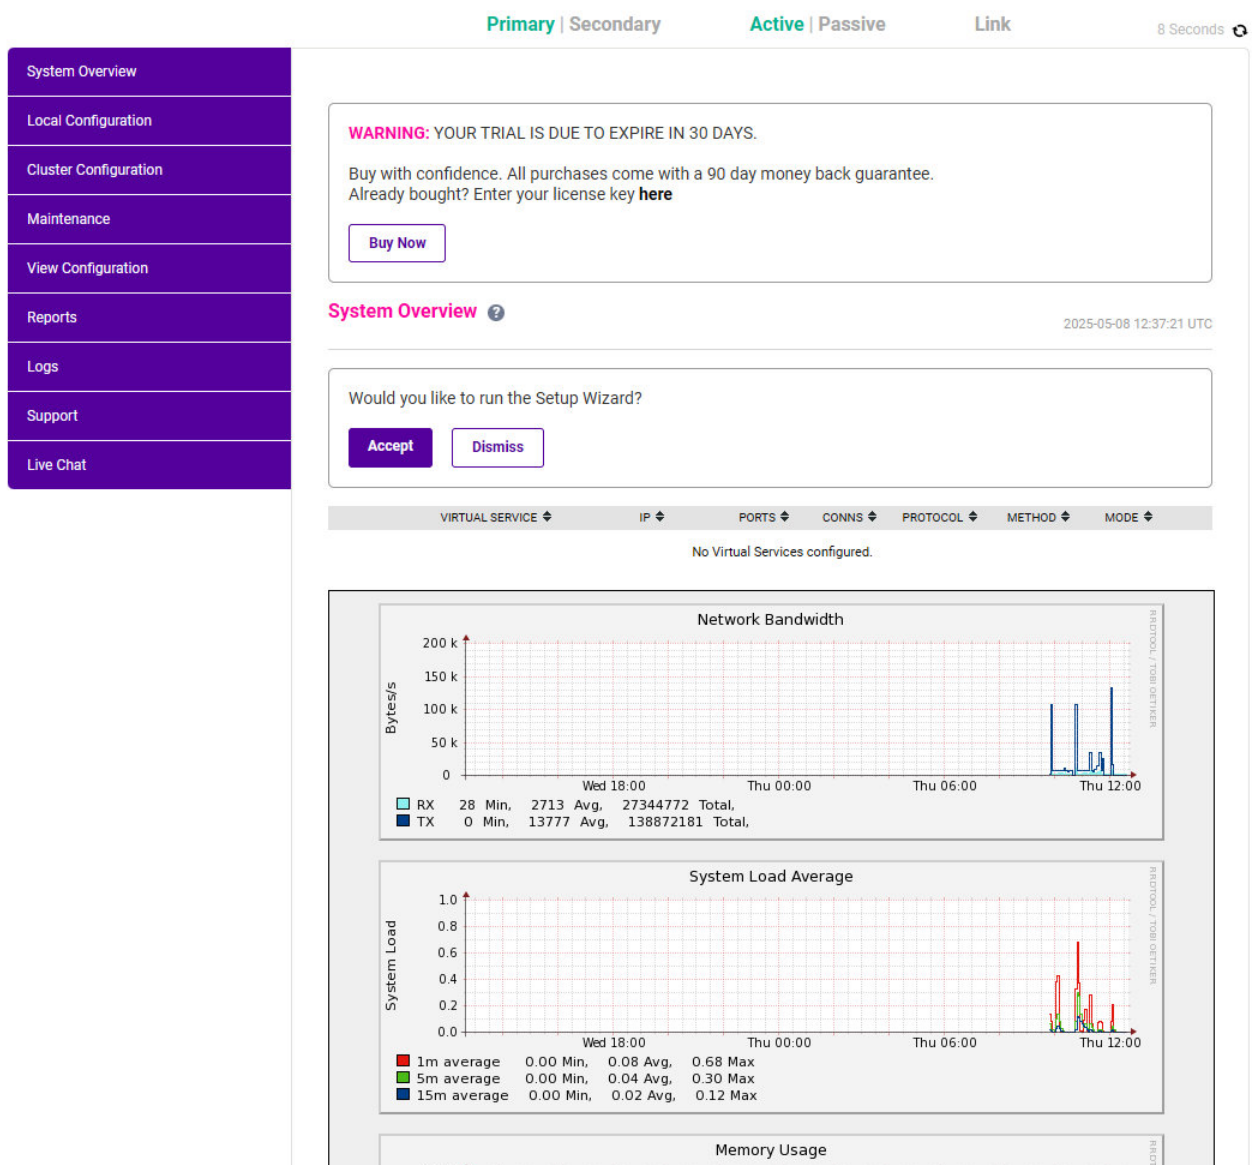

3. You'll be asked if you want to run the Setup Wizard. Click **Dismiss** if you're following a guide or want to configure the appliance manually. Click **Accept** to start the Setup Wizard.



Note

The Setup Wizard can only be used to configure Layer 7 services.

9.3.1. Main Menu Options

System Overview - Displays a graphical summary of all VIPs, RIPs and key appliance statistics

Local Configuration - Configure local host settings such as IP address, DNS, system time etc.

Cluster Configuration - Configure load balanced services such as VIPs & RIPs

Maintenance - Perform maintenance tasks such as service restarts and creating backups

View Configuration - Display the saved appliance configuration settings

Reports - View various appliance reports & graphs

Logs - View various appliance logs

Support - Create a support download, contact the support team & access useful links

9.4. Appliance Software Update

We recommend that the appliance is kept up to date to ensure that you benefit from the latest bug fixes, security updates and feature improvements. Both online and offline update are supported.

Note

For full details, please refer to [Appliance Software Update](#) in the Administration Manual.

Note

Services may need to be restarted/reloaded after the update process completes or in some cases a full appliance restart may be required. We therefore recommend performing the update during a maintenance window.

9.4.1. Online Update

The appliance periodically contacts the Loadbalancer.org update server (**update.loadbalancer.org**) and checks for updates. This is the default behavior and can be disabled if preferred. If an update is found, a notification similar to the example below will be displayed at the top of the WebUI:

Information: Update 8.13.2 is now available for this appliance.

Online Update

Click **Online Update**. A summary of all new features, improvements, bug fixes and security updates included in the update will be displayed. Click **Update** at the bottom of the page to start the update process.

Important

Do not navigate away whilst the update is ongoing, this may cause the update to fail.

The update can take several minutes depending on download speed and upgrade version. Once complete, the following message will be displayed:

Information: Update completed successfully. Return to **system overview**.

If services need to be reloaded/restarted or the appliance needs a full restart, you'll be prompted accordingly.

9.4.2. Offline Update

If the appliance does not have access to the Internet, offline update can be used.

To check for the latest version, please refer to our product roadmap page available [here](#). To obtain the latest offline update files contact support@loadbalancer.org.

To perform an offline update:

1. Using the WebUI, navigate to: **Maintenance > Software Update**.
2. Select **Offline Update**.
3. The following screen will be displayed:

Software Update

Offline Update

The following steps will lead you through offline update.

1. Contact **Loadbalancer.org support** to obtain the offline update archive and checksum.
2. Save the archive and checksum to your local machine.
3. Select the archive and checksum files in the upload form below.
4. Click *Upload and Install* to begin the update process.

Archive: No file chosen

Checksum: No file chosen

4. Select the *Archive* and *Checksum* files.
5. Click **Upload and Install**.
6. If services need to be reloaded/restarted or the appliance needs a full restart, you'll be prompted accordingly.

9.5. Ports Used by the Appliance

By default, the appliance uses the following TCP & UDP ports:

Protocol	Port	Purpose
TCP	22 *	SSH
TCP & UDP	53 *	DNS / GSLB
TCP & UDP	123	NTP
TCP & UDP	161 *	SNMP
UDP	6694	Heartbeat between Primary & Secondary appliances in HA mode
TCP	7778	HAProxy persistence table replication
TCP	9000 *	Gateway service (Centralized/Portal Management)
TCP	9080 *	WebUI - HTTP (disabled by default)
TCP	9081 *	Nginx fallback page
TCP	9443 *	WebUI - HTTPS
TCP	25565 *	Shuttle service (Centralized/Portal Management)

Note

The ports used for SSH, GSLB, SNMP, the WebUI, the fallback page, the gateway service and the shuttle service can be changed if required. For more information, please refer to [Service Socket](#)



9.6. HA Clustered Pair Configuration

Loadbalancer.org recommend that load balancer appliances are deployed in pairs for high availability. In this guide a single unit is deployed first, adding a secondary unit is covered in [Configuring HA - Adding a Secondary Appliance](#).

10. Appliance Configuration for Evertz Mediator-X – Using Layer 4 DR Mode (Scenario 1: Simple Deployment)

10.1. Configuring the Virtual Service (VIP)

1. Using the web user interface, navigate to *Cluster Configuration > Layer 4 – Virtual Services* and click on **Add a new Virtual Service**.
2. Define the *Label* for the virtual service as required, e.g. **Mediator-Global**.
3. Set the *Virtual Service IP Address* field to the required IP address, e.g. **192.168.85.140**.
4. Set the *Ports* field to **80**.
5. Leave the *Protocol* set to **TCP**.
6. Leave the *Forwarding Method* set to **Direct Routing**.
7. Click **Update** to create the virtual service.

Layer 4 - Add a new Virtual Service

Label	<input type="text" value="Mediator-Global"/>	?
Virtual Service		
IP Address	<input type="text" value="192.168.85.140"/>	?
Ports	<input type="text" value="80"/>	?
Protocol		
Protocol	<input type="text" value="TCP"/>	?
Forwarding		
Forwarding Method	<input type="text" value="Direct Routing"/>	?

8. Click **Modify** next to the newly created VIP.
9. Set the *Balance Mode* to **Weighted Round Robin**.
10. Ensure that the *Persistence Enable* checkbox is checked and that the *Timeout* is set to **300** (this should already be configured by default).

11. Set the *Health Checks Check Type* to **Negotiate**.
12. Set the *Check Port* to **80**.
13. Set the *Protocol* to **HTTP**.
14. Set the *Request to send* to **/mediator/main/loadBalancing/isExternallyAccessibleAPI**.
15. Ensure that the *Response expected* field is blank.
16. Click **Update**.

Connection Distribution Method			
Balance Mode	Weighted Round Robin ▼		?
Persistence			
Enable	<input checked="" type="checkbox"/>		?
Timeout	300	seconds	?
Granularity	<input type="text"/>		?
Health Checks			
Check Type	Negotiate ▼		?
Check Port	80		?
	Protocol	HTTP ▼	?
	Virtual Host	<input type="text"/>	?
	Request to send	/mediator/main/loadBalancing	?
	Response expected	<input type="text"/>	?

10.2. Defining the Real Servers (RIPs)

1. Using the web user interface, navigate to *Cluster Configuration > Layer 4 – Real Servers* and click on **Add a new Real Server** next to the newly created VIP.
2. Define the *Label* for the real server as required, e.g. **node-04**.
3. Set the *Real Server IP Address* field to the required IP address, e.g. **192.168.85.24**.
4. Click **Update**.
5. Repeat these steps to add additional Mediator-X servers as required.

Layer 4 Add a new Real Server - Mediator-Global

Label	<input type="text" value="node-04"/>	?
Real Server IP Address	<input type="text" value="192.168.85.24"/>	?
Weight	<input type="text" value="100"/>	?
Minimum Connections	<input type="text" value="0"/>	?
Maximum Connections	<input type="text" value="0"/>	?

CancelUpdate

11. Appliance Configuration for Evertz Mediator-X – Using Layer 7 SNAT Mode (Scenario 2: Deployment Using TLS-Based Encryption)

11.1. Enabling Multithreaded Load Balancing

Note

Multithreading is enabled by default for **new** load balancers starting from version 8.5.1 and does not require changing.

If upgrading an older appliance then ensure that the multithreading configuration is set correctly, as described below.

For the layer 7 load balancing scenario, the Loadbalancer.org appliance should be configured to actively use multiple CPU cores for the load balancing process. This is required to achieve the high level of performance and throughput required when load balancing a Mediator-X deployment at layer 7.

Note

A virtual host should be allocated a minimum of 4 vCPUs.

To enable multithreaded mode from the WebUI:

1. Navigate to **Cluster Configuration > Layer 7 - Advanced Configuration**.
2. Check the **Enable Multithreading** checkbox.
3. Check the **Default Number of Threads** checkbox.
4. Click **Update** to apply the changes.

Enable Multithreading	<input checked="" type="checkbox"/>	?
Default Number of Threads	<input checked="" type="checkbox"/>	?
Number of Threads	<input type="text" value="4"/>	?



11.2. Configuring the Virtual Service (VIP)

1. Using the web user interface, navigate to *Cluster Configuration > Layer 7 – Virtual Services* and click on **Add a new Virtual Service**.
2. Define the *Label* for the virtual service as required, e.g. **Mediator-Global**.
3. Set the *Virtual Service IP Address* field to the required IP address, e.g. **192.168.85.140**.
4. Set the *Virtual Service Ports* field to **80**.
5. Set the *Layer 7 Protocol* to **HTTP Mode**.
6. Click **Update** to create the virtual service.

Layer 7 - Add a new Virtual Service

Virtual Service		[Advanced +]
Label	<input type="text" value="Mediator-Global"/>	?
IP Address	<input type="text" value="192.168.85.140"/>	?
Ports	<input type="text" value="80"/>	?
Protocol		
Layer 7 Protocol	<input type="text" value="HTTP Mode"/>	?

CancelUpdate

7. Click **Modify** next to the newly created VIP.
8. Set the *Balance Mode* to **Weighted Round Robin**.
9. Set *Persistence Mode* to **X-Forwarded-For and Source IP**.
10. Click the **Persistence Advanced** button to expand the menu.
11. Set *Persistence Timeout* to **5**.
12. Set *Health Checks* to **Negotiate HTTP (HEAD)**.
13. Set the *Request to send* to **/mediator/main/loadBalancing/isExternallyAccessibleAPI**.

Connection Distribution Method			
Balance Mode	Weighted Round Robin ▼		?
Protocol			[Advanced]
Layer 7 Protocol	HTTP Mode ▼		?
Persistence			[Advanced]
Persistence Mode	X-Forwarded-For and Source IP ▼		?
Persistence	Timeout	5	?
	Table size	10240	?
	XFF IP Position	-1	?
	Clear Stick on Drain	<input type="checkbox"/>	?
Health Checks			[Advanced]
Health Checks	Negotiate HTTP (HEAD) ▼		?
Request to send	/mediator/main/loadBalancing		?

14. Click **Update**.

11.3. Defining the Real Servers (RIPs)

1. Using the web user interface, navigate to *Cluster Configuration > Layer 7 – Real Servers* and click on **Add a new Real Server** next to the newly created VIP.
2. Enter an appropriate name for the server in the *Label* field, e.g. **node-04**.
3. Change the *Real Server IP Address* field to the required IP address, e.g. **192.168.85.24**.
4. Set the *Real Server Port* field to **80**.
5. Click **Update**.

Layer 7 Add a new Real Server - Mediator-Global

Label	node-04	?
Real Server IP Address	192.168.85.24	?
Real Server Port	80	?
Re-Encrypt to Backend	<input type="checkbox"/>	?
Enable Redirect	<input type="checkbox"/>	?
Weight	100	?

Cancel Update

6. Repeat these steps to add additional servers as required.

11.4. Setting Up the TLS/SSL Termination

11.4.1. Uploading a Certificate

An appropriate certificate must be present on the load balancer for TLS/SSL termination to work. Typically, a valid certificate is uploaded to the load balancer for use. The process for doing this is as follows:

1. Using the web user interface, navigate to *Cluster Configuration > SSL Certificate* and click on **Add a new SSL Certificate**.
2. Press the *Upload prepared PEM/PFX file* radio button.
3. Define the *Label* for the certificate as required, e.g. **Mediator-Certificate**.
4. Click on **Browse** and select the appropriate PEM or PFX style certificate.
5. If uploading a PFX certificate, enter the certificate's password in the *PFX File Password* field.
6. Click **Upload certificate**.

The screenshot shows a web form for adding a new SSL certificate. It has three radio buttons under the heading 'I would like to:'. The first radio button, 'Upload prepared PEM/PFX file', is selected. The second is 'Create a new SSL Certificate Signing Request (CSR)' and the third is 'Create a new Self-Signed SSL Certificate'. Below the radio buttons is a text input field labeled 'Label' with the value 'Mediator-Certificate'. Below that is a 'File to upload' section with a 'Choose File' button and the filename 'MediatorCert.pem'. At the bottom right is a blue button labeled 'Upload Certificate'.

For more information on creating PEM certificate files and converting between certificate formats please refer to [Creating a PEM File](#).

In the absence of a valid certificate, it is also possible to create a certificate signing request (CSR) on the load balancer. A CSR can be submitted to a certificate authority for the issuance of a certificate. For more information on creating an CSR please refer to [Generating a CSR on the Load Balancer](#).

11.4.2. Creating the TLS/SSL Termination

1. Using the web user interface, navigate to *Cluster Configuration > SSL Termination* and click on **Add a new Virtual Service**.
2. From the *Associated Virtual Service* drop-down list, select the **Mediator-Global** service which was created previously.
3. Set the *Virtual Service Port* field to **443**.
4. From the *SSL Certificate* drop-down list, select the appropriate certificate.
5. Click **Update** to create the TLS/SSL termination service.

Label	SSL-Mediator-Global	?
Associated Virtual Service	Mediator-Global ▼	?
Virtual Service Port	443	?
SSL Operation Mode	High Security ▼	
SSL Certificate	Mediator-Certificate ▼	?
Source IP Address		?
Enable Proxy Protocol	<input checked="" type="checkbox"/>	?
Bind Proxy Protocol to L7 VIP	Mediator-Global ▼	?

Cancel
Update

Note

If encountering issues accessing certain resources over HTTPS, refer to the earlier section [Additional Changes when Adding TLS-Based Encryption](#).

11.5. Finalizing the Configuration

To apply the new settings, HAProxy and STunnel must both be reloaded. This can be done using the buttons in the "Commit changes" box at the top of the screen or by using the **Restart Services** menu option:

1. Using the WebUI, navigate to: **Maintenance > Restart Services**.
2. Click **Reload HAProxy**.
3. Click **Reload STunnel**.

12. Testing & Verification

Note

For additional guidance on diagnosing and resolving any issues you may have, please also refer to [Diagnostics & Troubleshooting](#).

12.1. Using System Overview

The System Overview can be viewed in the WebUI. It shows a graphical view of all VIPs & RIPs (i.e. the Mediator-X nodes) and shows the state/health of each server as well as the state of the cluster as a whole. The example below shows that all four Mediator-X nodes are healthy and available to accept connections:

	VIRTUAL SERVICE ⚙	IP ⚙	PORTS ⚙	CONNS ⚙	PROTOCOL ⚙	METHOD ⚙	MODE ⚙	
↑	Mediator-Global ✎	192.168.85.140	80	0	TCP	Layer 4	DR	
	REAL SERVER	IP	PORTS	WEIGHT	CONNS			
↑	node-04	192.168.85.24	80	100	0	Drain	Halt	
↑	node-05	192.168.85.25	80	100	0	Drain	Halt	
↑	node-06	192.168.85.26	80	100	0	Drain	Halt	
↑	node-07	192.168.85.27	80	100	0	Drain	Halt	

13. Technical Support

For more details about configuring the appliance and assistance with designing your deployment please don't hesitate to contact the support team using the following email address: support@loadbalancer.org.

14. Further Documentation

For additional information, please refer to the [Administration Manual](#).

15. Appendix

15.1. Configuring HA - Adding a Secondary Appliance

Our recommended configuration is to use a clustered HA pair of load balancers to provide a highly available and resilient load balancing solution. We recommend that the Primary appliance is fully configured first, then the Secondary appliance can be added to create an HA pair. Once the HA pair is configured, load balanced services must be configured and modified on the Primary appliance. The Secondary appliance will be automatically kept in sync.

Note

For Enterprise Azure, the HA pair should be configured first. For more information, please refer to the Azure Quick Start/Configuration Guide available in the [documentation library](#)

The clustered HA pair uses Heartbeat to determine the state of the other appliance. Should the active device (normally the Primary) suffer a failure, the passive device (normally the Secondary) will take over.

15.1.1. Non-Replicated Settings

A number of settings are not replicated as part of the Primary/Secondary pairing process and therefore must be manually configured on the Secondary appliance. These are listed by WebUI menu option in the table below:

WebUI Main Menu Option	Sub Menu Option	Description
Local Configuration	Hostname & DNS	Hostname and DNS settings
Local Configuration	Network Interface Configuration	Interface IP addresses, bonding configuration and VLANs
Local Configuration	Routing	Default gateways and static routes
Local Configuration	System Date & time	Time and date related settings
Local Configuration	Physical – Advanced Configuration	Various appliance settings
Local Configuration	Portal Management	Portal management settings
Local Configuration	Security	Security settings
Local Configuration	SNMP Configuration	SNMP settings
Local Configuration	Graphing	Graphing settings
Local Configuration	License Key	Appliance licensing
Maintenance	Backup & Restore	Local XML backups
Maintenance	Software Updates	Appliance software updates
Maintenance	Firewall Script	Firewall (iptables) configuration
Maintenance	Firewall Lockdown Wizard	Appliance management lockdown settings

Important

Make sure that where any of the above have been configured on the Primary appliance, they're also configured on the Secondary.


15.1.2. Configuring the HA Clustered Pair

Note

If you have already run the firewall lockdown wizard on either appliance, you'll need to ensure that it is temporarily disabled on both appliances whilst performing the pairing process.

1. Deploy a second appliance that will be the Secondary and configure initial network settings.
2. Using the WebUI on the Primary appliance, navigate to: **Cluster Configuration > High-Availability Configuration**.

Create a Clustered Pair



Local IP address

192.168.110.40

IP address of new peer

192.168.110.41


Password for *loadbalancer* user on peer

••••••••••


Add new node


3. Specify the IP address and the *loadbalancer* user's password for the Secondary (peer) appliance as shown in the example above.
4. Click **Add new node**.
5. The pairing process now commences as shown below:

Create a Clustered Pair

**Primary**

IP: 192.168.110.40


Attempting to pair..

**Secondary**

IP: 192.168.110.41

Local IP address

192.168.110.40

IP address of new peer

192.168.110.41


Password for *loadbalancer* user on peer


••••••••••

configuring

6. Once complete, the following will be displayed on the Primary appliance:


High Availability Configuration - primary


 **LOADBALANCER**



Primary

IP: 192.168.110.40

 **LOADBALANCER**

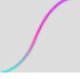

Secondary

IP: 192.168.110.41

Break Clustered Pair

7. To finalize the configuration, restart heartbeat and any other services as prompted in the "Commit changes" message box at the top of the screen.

Note

Clicking the **Restart Heartbeat** button on the Primary appliance will also automatically restart heartbeat on the Secondary appliance.

Note

For more details on configuring HA with 2 appliances, please refer to [Appliance Clustering for HA](#).

Note

For details on testing and verifying HA, please refer to [Clustered Pair Diagnostics](#).

16. Document Revision History

Version	Date	Change	Reason for Change	Changed By
1.0.0	30 May 2019	Initial version		AH
1.0.1	13 June 2019	<p>Added section on enabling HAProxy multi-threaded mode</p> <p>Added a comment that the changes to the Mediator servers should be carried out by Evertz engineers</p> <p>Changed some terminology at the request of Evertz</p> <p>Changed the diagrams to reflect the new simplified configurations</p> <p>Changed the instructions and screenshots to reflect the new single virtual service configuration</p>	Required updates	AH
1.1.0	24 July 2019	<p>Styling and layout</p> <p>Changed the health checks at the request of Evertz</p>	<p>General styling updates</p> <p>Required updates</p>	AH
1.1.1	1 August 2019	Made changes to section "Configuring Evertz Mediator-X for Load Balancing" at the request of Evertz	Required updates	AH
1.1.2	1 September 2020	<p>New title page</p> <p>Updated Canadian contact details</p>	<p>Branding update</p> <p>Change to Canadian contact details</p>	AH
1.2.0	1 November 2021	Converted the document to AsciiDoc	Move to new documentation system	AH, RJC, ZAC
1.2.1	21 March 2022	Added new multithreading advice	Product change means multithreading is now enabled by default	AH
1.2.2	22 April 2022	Updated SSL related content to reflect latest software version	New software release	RJC

Version	Date	Change	Reason for Change	Changed By
1.2.3	6 July 2022	Added new advice on allowing Mediator-X resources to be accessible over HTTPS	Feedback from a customer deployment	AH
1.2.4	28 September 2022	Updated layer 7 VIP and RIP creation screenshots	Reflect changes in the web user interface	AH
1.2.5	5 January 2023	<p>Combined software version information into one section</p> <p>Added one level of section numbering</p> <p>Added software update instructions</p> <p>Added table of ports used by the appliance</p> <p>Reworded 'Further Documentation' section</p> <p>Removed references to the colour of certain UI elements</p>	Housekeeping across all documentation	AH
1.2.6	2 February 2023	Updated screenshots	Branding update	AH
1.2.7	7 March 2023	Removed conclusion section	Updates across all documentation	AH
1.3.0	24 March 2023	<p>New document theme</p> <p>Modified diagram colours</p>	Branding update	AH
1.3.1	29 June 2023	Updated multithreading advice	New default option in the web user interface	AH



Visit us: www.loadbalancer.org

Phone us: +44 (0)330 380 1064

Phone us: +1 833 274 2566

Email us: info@loadbalancer.org

Follow us: [@loadbalancer.org](https://twitter.com/loadbalancer.org)

About Loadbalancer.org

Loadbalancer.org's mission is to ensure that its clients' businesses are never interrupted. The load balancer experts ask the right questions to get to the heart of what matters, bringing a depth of understanding to each deployment. Experience enables Loadbalancer.org engineers to design less complex, unbreakable solutions - and to provide exceptional personalized support.

